



MODEL # BTC-76TD-R

MODEL # BTC-36TD-R

2020 USER'S MANUAL

1. GENERAL FEATURES

- Displays the year, month, day, hour, minute, second and week
- 16 sets of self-shutting alarms, with alarm durations of 10 seconds, 30 seconds or 60 seconds. The default setting is 10 seconds
- 12/24 hour displays
- The display of the seconds can be turned off to feature only hours and minutes.

2. CLOCK SETUP

- PRESS returns to Clock mode
- Press to edit the time and date:
- The year flashes. Enter the desired numerical values using the remote keypad.
- Press right or left arrows to move to the next / previous value to edit. The setting order is year, month, day, hour, minute and seconds.
- Press to save and exit the settings. Press to exit without saving the settings.
- In clock mode Press to switch between 12h and 24 hours display

3. ALARM

- In clock mode, press to set the alarms. The alarm icon flashes.
- An "H" will be displayed in the month position. "01" will be displayed in the daily position and flash and the time is displayed by default as "--:--". This means that there is no alarm assigned to the first alarm group. Press the up arrow or down arrow to choose the groups of alarms. There are a total of 16 alarm groups.
- Press to set the alarm:
- The hour flashes. The default value is "--:--". This means the alarm is not enabled. Press the right or left arrows to select the value to be edited, and use the numerical keypad to enter the desired value.
- Press to save and return to the alarm selection screen. Press to exit without saving and return to the alarm selection screen. If the alarm time is set, the alarm icon will always be on.
- To cancel the alarm
In the alarm setting mode, select the alarm to be cancelled and press RESET to restore the default value of the group("--:--"). The alarm icon will turn off.

5. ALARM SOUND

- Set the alarm duration:

From clock mode, press MUTE to enter the alarm setting mode, then press MUTE once more to enter the alarm duration setting. The month digit displays an "S" and the daily digit displays "10" and flashes, indicating the duration of the alarm. There are three preset options: 10 seconds, 30 seconds, and 60 seconds. Press SET to save the desired alarm duration and return to the alarm selection screen.

Note: as long as one group of alarms is enabled, the alarm icon will display.