

MODEL #210 7" NUMERALS CALENDAR WALL CLOCK

2018 USER'S MANUAL

1. SETTING TIME AND CALENDAR

PRESS SET The year flashes. Press the number digits to set the correct year, (so for year 2018 press 2018) **PRESS SET** again the month flashes. Press the number digits for the correct month (i.e. June is 06.) **PRESS SET** again and the day of the month is flashing. Press the number digits for the correct day **PRESS SET** again and the hour flashes in 24 hour time. Directly enter the correct hour (i.e.7pm press19 or 7am press 7) **PRESS SET** again and the minutes flashes. Directly enter the correct minutes. **PRESS EXIT** to save

PRESS CLOCK BUTTON WHEN YOU NEED TO CHANGE THE TIME ONLY

SETTING THE 12 HOUR/24 HOUR SYSTEM:

PRESS 12/24 button to switch the 12 hours / 24 hours time system. When the 24 hour system is set the AM/PM buttons will not light.

2. ALARMS

SETTING THE ALARMS:

- When any alarm is set to ON, the top alarm icon on the right lights up. To stop alarm sound when it is sounding press any key.
- In the normal clock, press the F1 key and 01 will flash for 2 seconds then the hour digits will flash. Directly enter the hours and press SET then the minutes will flash. Directly enter the minutes and press SET and the alarm status will show 01 and : ——— is flashing. Use the UP/DOWN arrow to turn the alarm ON or OFF. When the alarm is OFF : ——— is showing.
- To continue setting the alarms press the RIGHT arrow and F2 will show and repeat the settings or to set any alarm **PRESS** the F2, F3 etc. buttons directly.
- To check any alarm status press the appropriate F button and contents will be displayed after 2 seconds.

CANCEL THE ALARMS

To cancel any alarm press the appropriate F button and go the ON/OFF screen and use the DOWN arrow to turn the alarm off. The alarm should then show :— — and this means the alarm is OFF

SETTING HOURLY ALARM:

(The hourly alarm will not operate if a regular alarm is set. The bottom icon on the right lights when this alarm is on)

In normal display mode, PRESS EXIT to turn on/off hourly alarm. When the function is on, the clock will sound the alarm every hour at .00mins. Such as 1:00,2:00,3:00,4:00... 11:00,12:00. The hourly alarm icon, the bottom button on the right, lights when this function is on.

3. CLOCK FEATURES

BRIGHTNESS

There are three brightness levels. Press the button 2 consecutive times to see other levels of brightness

MUTE KEY

Press mute key for 3 seconds (a beep will sound indicating a change in this function)and all sound will be muted including data entry beep and alarm sounds. Press MUTE button for 3 seconds again to turn on sound again

VOLUME BUTTON

Press this button to reduce alarm and data entry beep volume